


MODEL 199

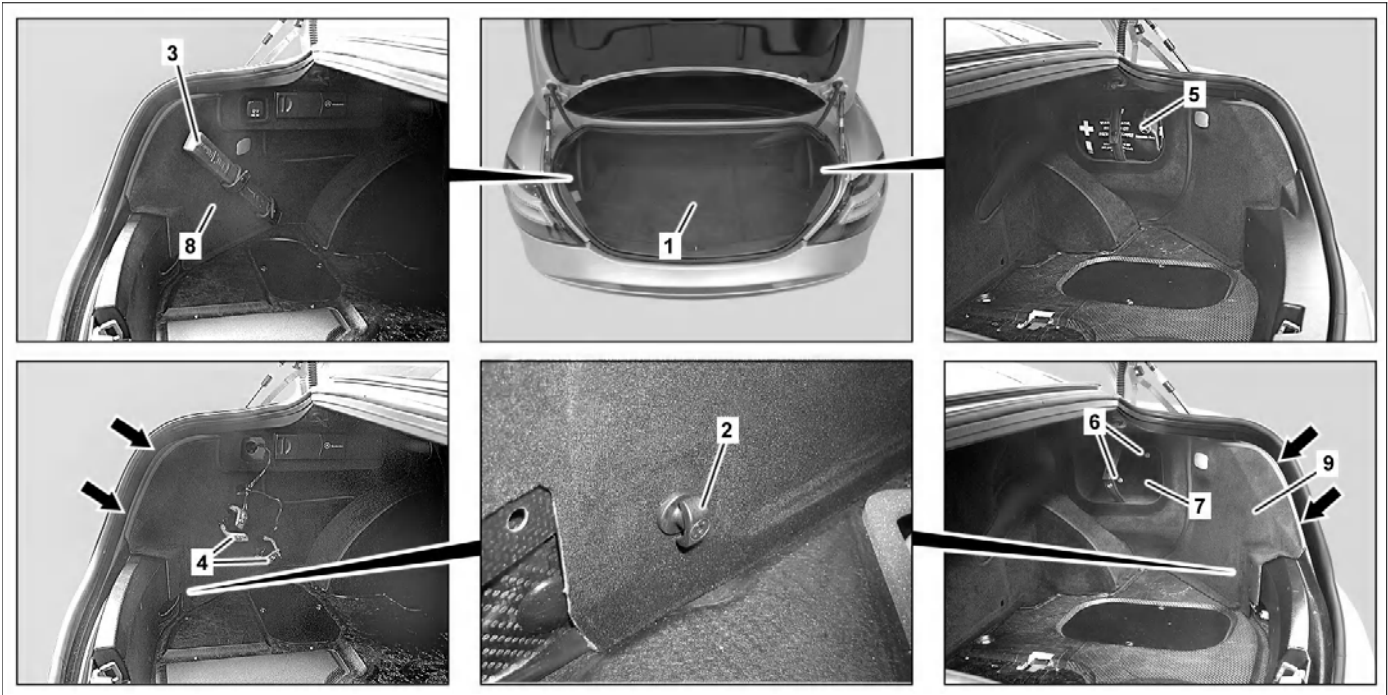













P68.30-3328-09

2 Anchoring lug
3 Hazard warning triangle
4 Bracket


5 First aid set
6 Bolts
7 Stowage compartment

8 Side paneling in trunk on left
9 Side paneling in trunk on right

 	Remove/install		
1	Remove paneling in center of luggage compartment	Model 199.3 Model 199.4	AR68.30-P-4810SLR AR68.30-P-4810SLC
2	Remove trim from rear end center assembly		AR68.30-P-4785SLR
3	Remove trunk lamp		AR82.20-P-0111SLR
4	Remove auxiliary socket	 Left-hand side.	AR54.10-P-0020SLR
5	Remove hazard warning triangle (3)	 Left-hand side.	
6	Remove bracket (4)	 Left-hand side.	
7	Remove first aid set (5)	 Right side.	
8	Remove bolts (6)	 Right side.	
9	Remove stowage compartment (7)	 Right side.	
10	Remove lashing eyes (2)	 Installation: Use Loctite 221 thread locking compound. 	*BR00.45-Z-1036-02A *BA68.50-P-1001-03H
11	Remove clip of side paneling in trunk on left (8) from CD changer bracket.	 On model 199.3 two clips are installed.	
12	Unclip side paneling in trunk on left (8) or right (9) at rear (arrows) with assembly wedge.		*110589035900
13	Loosen side paneling in trunk on left (8) or right (9) on Velcro strips and remove.		
14	Install in the reverse order		

 Load retainer

Number	Designation	Model 199
BA68.50-P-1001-03H	Bolt, anchoring lug to luggage compartment floor	Nm 2.5

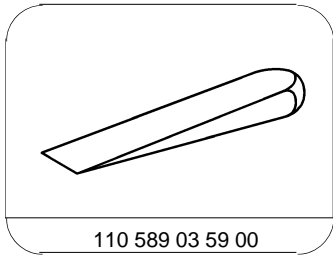

Assembly wedge

Auxiliary repair materials

Number	Designation	Order number
BR00.45-Z-1036-02A	Loctite 221 thread locking compound	Henkel Loctite Deutschland GmbH Arabellastrasse 17 81925 München Germany Tel. +49-899268-0 Fax +49-899101978 www.Loctite.de